

HYDRAULIC PUMP SPECIFICATIONS

MODEL & SERIAL NUMBER	3600 RPM @ 0 PSI / (0 kPa) GPM (l/MIN)	3000 RPM @ 0 PSI / (0 kPa) GPM (l/MIN)	3000 RPM @ 1000 PSI (6890 kPa) 1500 PSI (10340 kPa) ON 14 HP & ABOVE GPM (l/MIN)
644 S/N9698284 AND UP	3600 RPM @ 9.5 (36)	3000 RPM @ 8 (30.25)	3000 RPM @ 7.25 (27.5)
648 3010, 3012 ALL 3014, 3016 ALL 3018, 3020 ALL 4014, 4016 ALL 4018, 4020 ALL	3600 RPM @ 11.25 (42.75)	3000 RPM @ 9.5 (36)	3000 RPM @ 8.25 (31)
3016PS 3018PS ALL 3020PS ALL 4016PS ALL 4018PS ALL 4020PS ALL	3600 RPM @ 11.25 (42.75) FRONT SECTION * FRONT SECTION ** 2.50 (9.75) REAR SECTION **	3000 RPM @ 9.5 (36) FRONT SECTION * REAR SECTION ** 2.25 (8.5)	3000 RPM @ 8.25 (31) FRONT SECTION * REAR SECTION ** 1.75 (6.75)
3118 ALL 4116 ALL 4118 ALL 4120 ALL	3600 RPM @ 11.25 (42.75) FRONT SECTION * FRONT SECTION ** 2.50 (9.75) REAR SECTION **	3000 RPM @ 9.5 (36) FRONT SECTION * REAR SECTION ** 2.25 (8.5)	3000 RPM @ 8.25 (31) FRONT SECTION * REAR SECTION ** 1.75 (6.75)
6018 ALL	3600 RPM @ 11.25 (42.75) FRONT SECTION * FRONT SECTION ** 2.50 (9.75) REAR SECTION **	3000 RPM @ 9.5 (36) FRONT SECTION * REAR SECTION ** 2.25 (8.5)	3000 RPM @ 8.25 (31) FRONT SECTION * REAR SECTION ** 1.75 (6.75)
<p>* FRONT PUMP SECTION - SECTION NEAREST FRONT OF TRACTOR</p> <p>MODELS 3100, 4100 6018 LOADER 6018 LOADER/BACKHOE</p> <p>CIRCUIT PTO, TRAVEL, ATTACHMENT LIFT POWER-STEERING, LOADER BACKHOE, POWER-STEERING, LOADER</p> <p>** REAR PUMP SECTION - SECTION NEAREST REAR OF TRACTOR</p> <p>MODELS 3100, 4100 6018 LOADER 6018 LOADER/BACKHOE</p> <p>CIRCUIT PTO, TRAVEL, ATTACHMENT LIFT POWER-STEERING, LOADER BACKHOE, POWER-STEERING, LOADER</p>			